

# Hot Tub Troubleshooting Tip

## Jets Not Working

### Step 1: Verify the Water Level


- ❑ **Ensure the water level is above the jets:** Check that the water level in the hot tub is high enough to cover all the jets. Add water if necessary.

### Step 2: Clean the Jets

- ❑ **Remove and clean each jet with a brush:** Turn off the power and remove the jets. Use a soft brush to clean them, removing any buildup or debris.
- ❑ **Check for any debris or blockages:** Ensure no obstructions are inside the jet openings or in the pipes leading to the jets.

### Step 3: Check the Pump

- ❑ **Ensure the pump is running and there are no airlocks:** Turn on the hot tub and listen for the pump to run. If it does not, check for airlocks by loosening the bleeder valve on the pump to release the trapped air.
- ❑ **Bleed the air from the pump by loosening the bleeder valve:** If there is an airlock, turn off the power, locate the bleeder valve on the pump, and slowly loosen it to let air escape. Once the water starts flowing steadily, tighten the valve and turn the power back on.

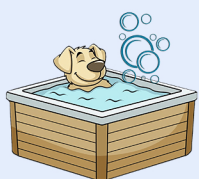

**Love's  
Hot Tubs**

Name Brand Spas Below Retail Pricing

208-353-2171

loveshottubs.com