

Hot Tub Troubleshooting Tip

Hot Tub Leaks

Step 1: Identify the Leak Source

- ❑ **Look for visible signs of water around the hot tub:** Inspect the area around the hot tub for puddles or damp spots.
- ❑ **Check connections, seals, and fittings:** Examine all visible plumbing connections, seals, and fittings for signs of leakage. Tighten or replace any loose or damaged parts.

Step 2: Inspect the Plumbing

- ❑ **Examine all pipes and connections for cracks or loose fittings:** Carefully inspect the pipes and connections inside and outside the hot tub for any cracks or looseness.
- ❑ **Tighten or replace faulty parts:** Secure any loose connections and replace damaged pipes or fittings as needed.

Step 3: Use a Leak Sealant

- ❑ **Apply a hot tub-specific leak sealant as a temporary fix:** Purchase a leak sealant designed for hot tubs and follow the instructions for application. This can temporarily seal small leaks.
- ❑ **For persistent leaks, consult a professional:** If the leak persists after using a sealant, contact a professional for a thorough inspection and repair.



**Love's
Hot Tubs**

Name Brand Spas Below Retail Pricing

208-353-2170

loveshottubs.com