

Hot Tub Troubleshooting Tip

Water Not Heating

Step 1: Check the Thermostat

- ❑ **Ensure the temperature is set correctly:** Verify that the thermostat is set to your desired temperature, typically between 100-104°F (37-40°C).
- ❑ **Increase the temperature setting and wait for the heater to engage:** Slightly increase the temperature setting and wait a few minutes to see if the heater activates.

Step 2: Inspect the Heater

- ❑ **Look for any visible damage or signs of wear:** Turn off the power and visually inspect the heater for any signs of damage, such as cracks, burns, or discoloration.
- ❑ **Ensure the heater connections are secure:** Check that all electrical connections to the heater are tight and free from corrosion.

Step 3: Examine the Water Flow

- ❑ **Clean the filter to improve water flow:** Remove the filter and rinse it with a garden hose. For a deeper clean, soak the filter in a cleaning solution overnight, then rinse thoroughly.
- ❑ **Make sure there are no blockages in the pipes or jets:** Check the water lines and jets for debris or obstructions that could impede water flow. Remove any blockages found.



**Love's
Hot Tubs**

Name Brand Spas Below Retail Pricing

208-353-2170

loveshottubs.com