



# Hot Tub Chemical Balance Guide

## Check Levels 2-3 Times A Week

### Alkalinity

100-150 ppm  
120 Is Ideal

#### If High

Add Sodium Bisulfate To  
Lower The Levels


#### If Low

Add Sodium Bicarbonate To  
Increase The Levels

Wait 20 Minutes & Retest/Adjust

### PH Level

7.4-7.6

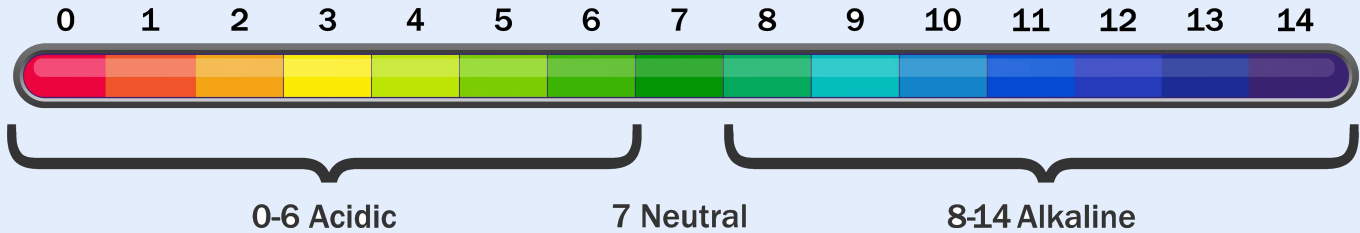

### Sanitiser



**Chlorine**  
1-3 ppm



**Bromine**  
3-5 ppm

Bromine Has Mostly Replaced Chlorine As A Hot Tub  
Sanitizer & Is Less Harsh With A less potent Smell

### Calcium

120-250 ppm

#### If High

Add A Stain & Scale To  
Lower The Levels

#### If Low

Add Calcium Booster To  
Increase The Levels

### Minerals

Reduce The Amount Of Sanitizer needed By  
Using A Mineral Based Clarifier



## Love's Hot Tubs

208-353-2170

loveshottubs.com